

INSTALLATION INSTRUCTIONS

ORIGINAL EQUIPMENT REPLACEMENT STEERING STABILIZER SERVICE UNIT PONTIAC FIERO

CAUTION:- AN IMPROPER INSTALLATION OF THIS STEERING STABILIZER COULD RESULT IN AN UNSAFE VEHICLE CONDITION IF THE TURNING RADIUS OF THE VEHICLE IS RESTRICTED. AFTER INSTALLATION IS COMPLETED CHECK FOR FULL TURNING RADIUS AND MAKE SURE THERE IS ADEQUATE CLEARANCE BETWEEN THE STEERING STABILIZER AND NEARBY COMPONENTS.

REMEMBER - SAFETY PROCEDURES ARE ESSENTIAL FOR YOUR PERSONAL PROTECTION WHEN SERVICING ANY VEHICLE!

1. REMOVE THE ORIGINAL STEERING STABILIZER.
2. CHECK FOR BENT OR DAMAGED BRACKETS, REPAIR OR REPLACE IF NECESSARY.
3. INSTALL THE NEW STEERING STABILIZER WITH BODY END OF STABILIZER TOWARD THE CENTER OF THE VEHICLE.
4. RE-USE THE ORIGINAL NUTS & WASHERS, TIGHTEN NUTS TO 20-25 FT.LBS. TORQUE. (27-34 N-m).

CHECK FOR ADEQUATE CLEARANCE BETWEEN THE STEERING STABILIZER AND NEARBY COMPONENTS BY TURNING THE WHEEL FROM FULL LEFT TO FULL RIGHT POSITIONS.

FORM-00770